

Brickcom

NVR-E-Map

FAE Team

2011.8

Agenda



E-Map



Popup E-Map on Event

NVR - E-Map

❖ E-Map

- User can easy to find up devices. And instance response when event happened.



NVR - E-Map

- Load Image: Add/Delete map.
- Fill: Map will fill in window.




Load image

Fill

NVR - E-Map


- Original size: Map will original size in window.

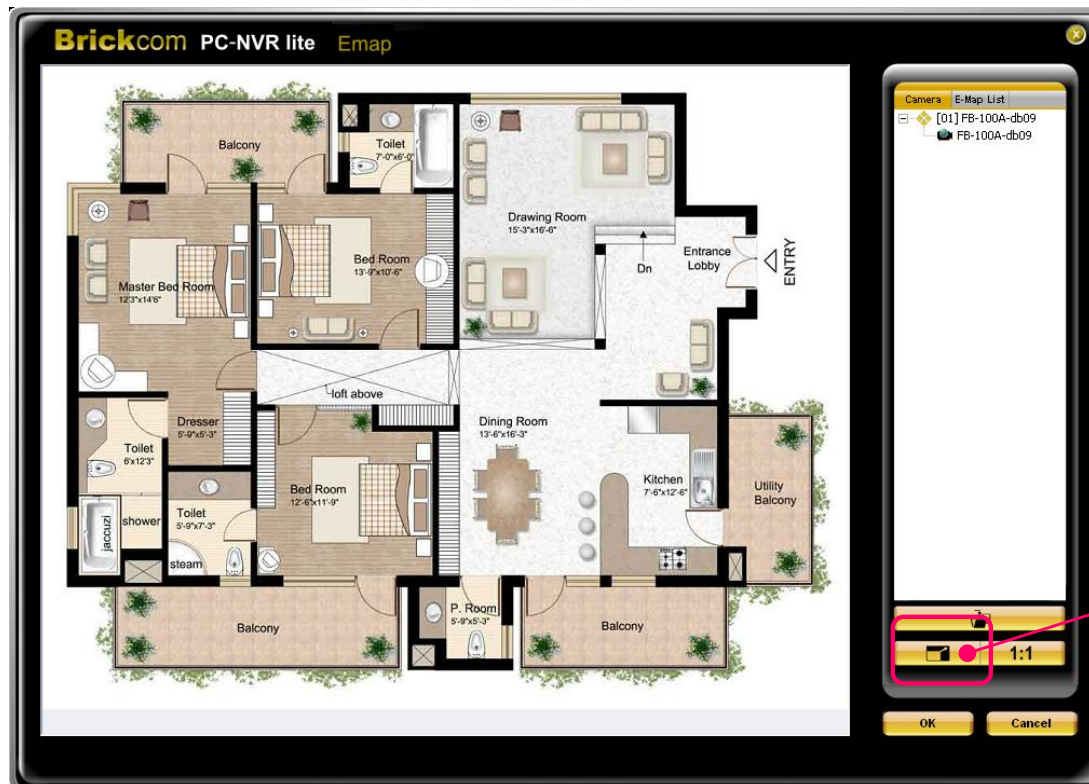

Original size


NVR - E-Map

- Click mouse from Camera list and select one to drop on E-Map to indicate the Camera location and direction.

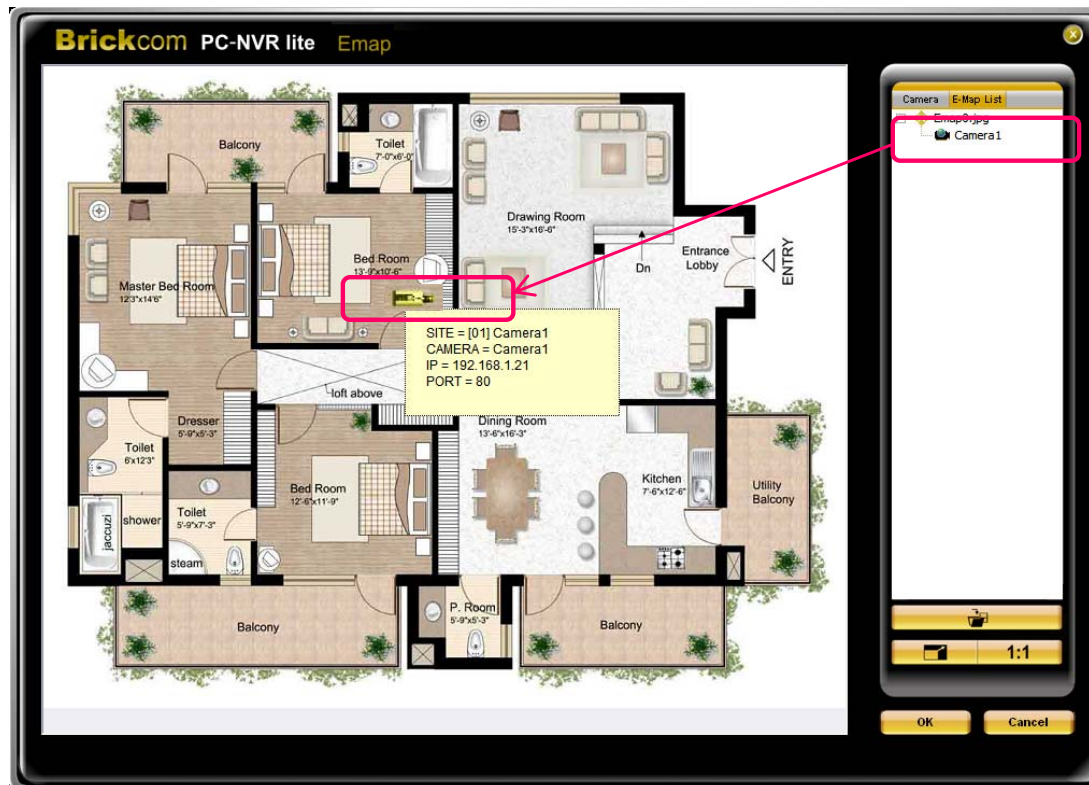

NVR - E-Map


- Add/Delete Device Indicator: Select which camera you want to preview video on preview window and mark indicator on E-map.

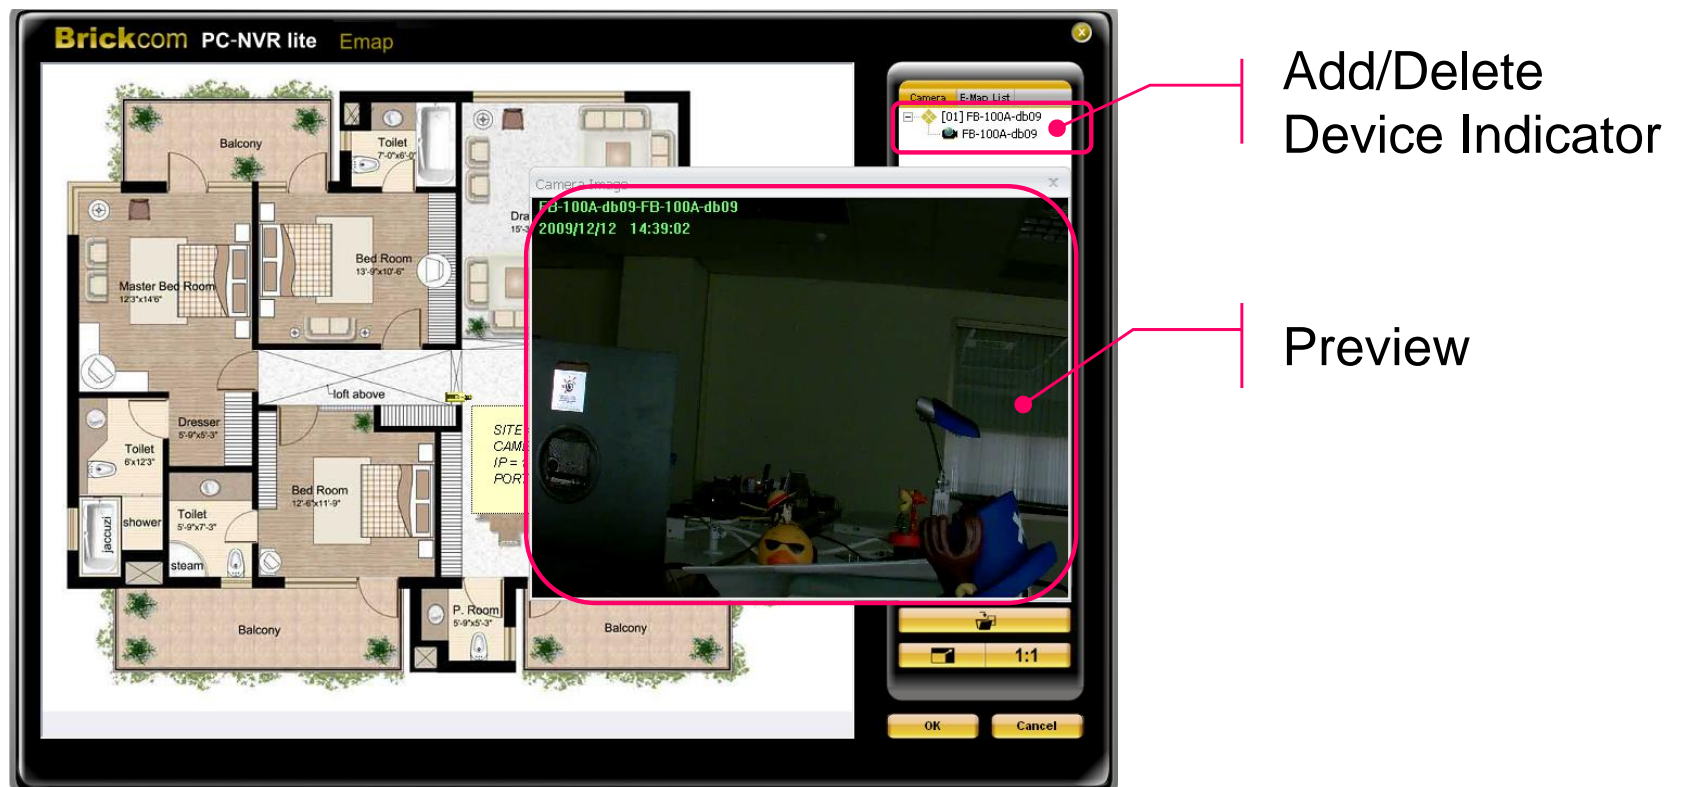

NVR - E-Map

❖ Popup E-Map on Event:

- The system will auto popup E-Map window and show the assigned map and indicator.

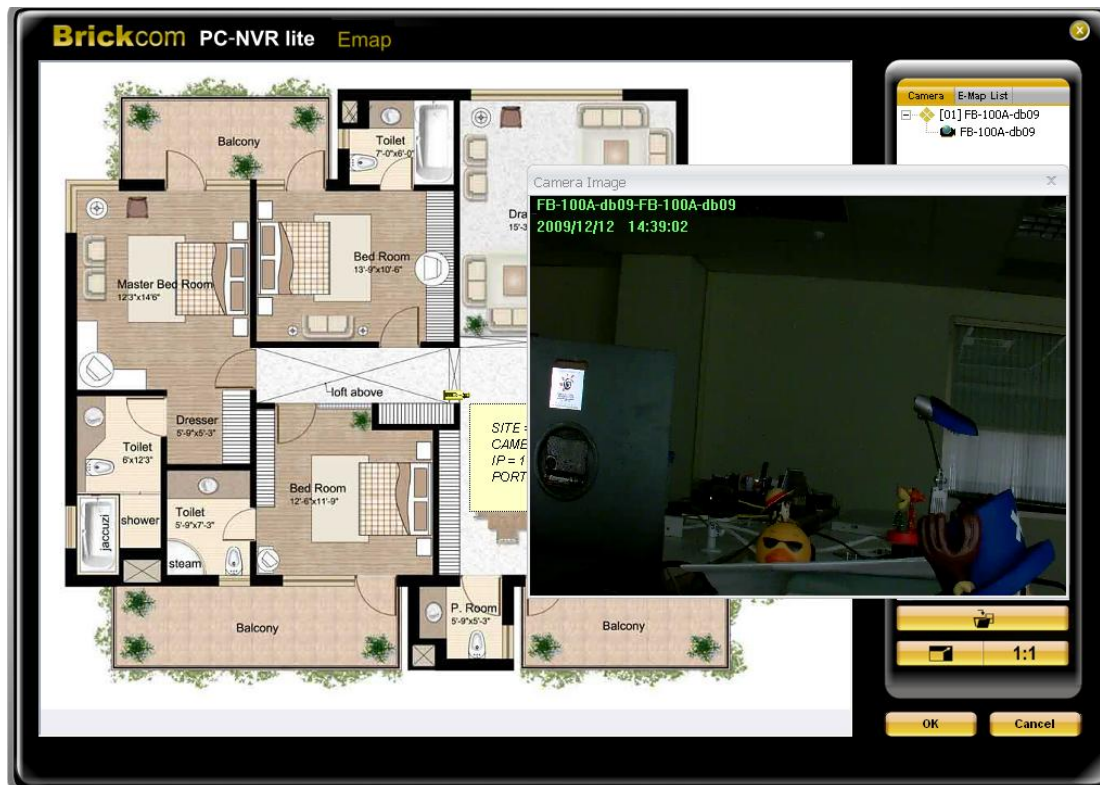

Contact Us

Brickcom Corporation Headquarters

Address	No.1 Jen Ai Rd, Hsinchu Industrial Park, Hukou, Hsinchu, Taiwan, R.O.C. 303
Tel	+886-3-5982022
Fax	+886-3-5982023
Website	http://www.brickcom.com
Sales & Marketing	info@brickcom.com
Support	support@brickcom.com

Brickcom, your best partner.

Thank You

